

PR120H Pelletizer

USER MANUAL



Copyright © 2024 Cold Jet, DK

ALL RIGHTS RESERVED. PRINTED IN DENMARK.

DUE TO CONTINUED PRODUCT DEVELOPMENT THIS INFORMATION MAY CHANGE WITHOUT NOTICE. THE INFORMATION AND INTELLECTUAL PROPERTY CONTAINED HEREIN IS CONFIDENTIAL BETWEEN COLD JET AND THE CLIENT AND REMAINS THE EXCLUSIVE PROPERTY OF COLD JET. IF YOU FIND ANY PROBLEMS IN THE DOCUMENTATION, PLEASE REPORT THEM TO US IN WRITING. COLD JET DOES NOT WARRANT THAT THIS DOCUMENT IS ERROR-FREE. NO PART OF THIS PUBLICATION MAY BE REPRODUCED, STORED IN A RETRIEVAL SYSTEM, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC, MECHANICAL, PHOTOCOPYING, RECORDING OR OTHERWISE WITHOUT THE PRIOR WRITTEN PERMISSION OF COLD JET.

THIS MANUAL REFLECTS THE PRODUCT CONFIGURATION AS WAS CURRENT AT THE TIME OF ITS WRITING. AN ITEM'S DISPLAY IN THIS MANUAL DOES NOT GUARANTEE THE ITEM'S AVAILABILITY AT ANY TIME IN THE FUTURE. IMAGES SHOWN ARE FOR REPRESENTATION PURPOSES ONLY. PRODUCTS MAY VARY FROM THE IMAGES DISPLAYED. COLD JET IS NOT LIABLE FOR TYPOGRAPHICAL ERRORS OR CHANGES TO SPECIFICATIONS PRESENTED.

TABLE OF CONTENTS

Introduction	4
About the PR120H.....	4
System Description.....	6
Functional description.....	6
System Identification.....	7
Supplier Responsible for the Equipment	7
TECHNICAL DATA - SAFETY REGULATIONS.....	8
TECHNICAL FACTS OF FROZEN CO2	9
SAFETY REGULATIONS.....	10
General Measures	10
Personnel Qualifications	10
Security and Risk.....	10
SAFETY OPERATION	14
Emergency Stop.....	14
Machine Safety	14
Liquid CO2 Leakage	14
Stop Production	14
Daily checkup before start-up.....	14
MACHINE STRUCTURE	15
MACHINE OPERATION START-UP.....	16
MACHINE CONTROLS	17
REPAIR AND WARRANTY	20
Repair	20
MAINTENANCE	20
Degassing system	20
Hydraulic station	20
Terms of Warranty	21
Cleaning the PR120H.....	21
INSTRUCTION – UNPACKING AND PREPARATIONS BEFORE INSTALLATION	22
End of life for the PR120H	24
Notes.....	25
Contact Information	26



INTRODUCTION

This manual should be kept with the machine and be readily accessible to machine users. This manual contains information on the safety and operation. The graphics used in this manual may show machine details that may be different than the actual machine. Components of the machine may have been removed for illustrative purposes or the continuing improvement of the machine's design may cause changes that are not included in this publication.

The owner of this machine is responsible for verifying the operator of this machine is properly trained and understands the contents of this manual

About the PR120H

The Cold Jet PR120H presents a state-of-the-art dry ice pelletizer packed with features for easy operation, swift production shifts and high capacity.

The Cold Jet PR120H has a quick start-up that reduces downtime and loss of valuable CO₂. This is secured by a start-up sequence purging the liquid line and using a special valve to fill the chamber.

The Cold Jet PR120H uses a heat exchanger for sub-cooling the liquid CO₂, enabling a higher utilization of the liquid CO₂ and a better liquid to solid CO₂ ratio.

The machine parts are protected by a moisture-free enclosure, which also reduces the noise level to a minimum - below 75 dB(a). The Cold Jet PR120H provides a non-stop supply of high-density dry ice pellets. The source of raw material to produce pellets is liquid carbon dioxide conserved at low temperatures in a storage tank.

The control system of the Cold Jet PR120H, based on Beckhoff Industrial PC and HMI system, offers maximum functionality and a user-friendly interface. Production is started by pressing one button. Just-In-Time production minimizes labour and waste during production.





SYSTEM DESCRIPTION

This user's manual covers the Cold Jet PR120H. The main parts are described in the machine structure section. Operating instructions for add-ons can be found in separate instructions, and are not included in this manual.

Functional description

The main function of the Cold Jet PR120H is to produce dry ice pellets from liquid carbon dioxide.

This is performed by a sequence of operations executed by the Beckhoff Panel PC. The main steps in a normal production are as follows and refer to PI diagram P294-1-11991-B for Cold Jet PR120H CE and P294-1-16309-A for Cold Jet PR120H UL:

1. **Start up**
2. **Production**
3. **Standby**
4. **Shut down**

At every start-up, the hydraulic cylinder =G01-G1-MO1 for extruder piston is extracted to its maximum position to extrude the CO2 snow in the chamber in case of emergency stop or machine error.

Liquid CO2 is fed from an external CO2 tank (not part of this description – see supplier information) through an insulated pipe to the Cold Jet PR120H. It is recommended to use a gas separator to eliminate gaseous CO2 from the liquid CO2.

When the hydraulic cylinder =G01-G1-MO1 for the extruder piston is retracted CO2 in valve =W01-Q1 and injection valve =G01-Q2 will open and purge gaseous CO2 through the chamber, degassing filters and via degassing pipes to CO2 out. When temperature =W01-TT1 in the liquid CO2 is -14°C, first injection will begin using =G01-Q1 and proceed until the timer is reached. The degassing valve =G01-Q5 on the extruder chamber will open to reduce chamber pressure before the hydraulic cylinder =G01-G1-MO1 for the extruder piston will extract until pressure set point is reached and the hydraulic cylinder will again retract. This will continue until plug thickness set point is reached. When plug thickness is reached, production will commence.

In production mode CO2 In valve =W01-Q1 and the Injection valve =G01-Q1 will open until the timer is reached. The degassing valve =G01-Q5 on the extruder chamber will open to reduce chamber pressure before hydraulic cylinder =G01-G1-MO1 for the extruder piston will extract until plug set point is reached and the hydraulic cylinder will again retract. This cycle will continue until a different step is selected. During production, it is possible to set Cold Jet PR120H in standby. When maximum standby time is reached, the Cold Jet PR120H will run a shutdown sequence.

The shutdown sequence ensures that the Cold Jet PR120H is stopped in a proper position to empty extruder chamber from dry ice snow and avoid moisture in the extruder chamber. The hydraulic cylinder =G01-G1-MO1 for extruder piston will extract to maximum position and return to shutdown set point position.

The PR120H is supplied with a cap to be installed on the outlet sprout at production stop. This will hinder dew from condensating inside the extruder cylinder and filter. If the cap is not installed at production stops, it can cause damage to vital components inside the extruder unit. Before production start-up, the cap should be removed.



Color detection of the lighthouse

Green: Machine is ready and there are no alarms (error messages).

Yellow: Machine has been paused.

Red: Machine out of operation due to an alarm (error message).

System Identification

The machine is double marked with EU and UL approval.

PR120H		
Machine no.:		Weight:
512641		650 kg 1433 lbs
Serial no.:	Year:	Power:
2022-09-11	2022	3x400/480V AC+PE, 50/60Hz I _{max} , 16A
P max. CO₂:	P max. Air:	
22 Bar/319 Psi	10 Bar/145 Psi	
		
Industrivej 68 - DK-6740 Bramming - www.coldjet.com		

Example of a system identification, values and numbers may vary

Supplier Responsible for the Equipment

Cold Jet ApS
Industrivej 68
DK-6740 Bramming
Denmark
Phone: +45 75 56 15 00
Homepage: www.coldjet.com
Email: info@coldjet.com

TECHNICAL DATA - SAFETY REGULATIONS

Rated Output:

Kg/h: up to 120 / lbs/h: up to 265

Of high quality dry ice pellets, depending on the extruder plate applied

Pellet Size:

Diameter:

Mm: 3, 10, or 16 / Inch: 1/8, 3/8, or 5/8

Cylindrical - length varying from:

mm: 50 to 100 / inch: 2 to 4

Inlet Liquid CO2 Pressure:

Bar: 16 – 22 / Psi: 232 – 319

Liquid CO2 Dryness Fraction:

The water content should not exceed 35 ppm and should not be less than 5 ppm – or equivalent to a dewpoint Temperature of -66°C to -51°C (-86.8°F to -59.8°F).

NOTE:

The liquid CO2 supply must be completely free of oil and must have a purity of minimum 99.9%.

Liquid CO2 Supply Pipe:

Internal diameter 20 mm (3/4 inch), very well insulated with a minimum number of bends and fittings.

NOTE: If over 20 m (65.6 feet) in length, always use an internal diameter of 25 mm (1 inch).

Compressed air / CO2 gas pressure:

Bar: 8 – 10 / psi: 116 – 145

Air quality Class 3 – according to ISO 8573-1

Power Supply:

3 x 400 V AC + PE, 50Hz,

TN-S Earthing system

Imax. 16 A

480V AC Solidly Grounded Wye Source

3 Phase + GND wire, 60Hz

Imax. 16 A

Control Panel SCCR: 25kA rms symmetrical 480VAC Max.

Rated power:

8,3 kW / 10,7 Hp

Machine Dimensions:

Length: 1150 mm / 45,3 in

Width: 650 mm / 25,6 in

Height: 1738 mm / 68,4 in

Weight: 754 kg / 1662 lbs

Noise level: below 75 dB(a)




TECHNICAL FACTS OF FROZEN CO₂

Dry ice is frozen carbon dioxide (CO₂). It is much denser and colder than traditional ice. Dry ice is -79°C (-109.3°F). Traditional ice is 0°C (32°F).

In addition, dry ice does not melt - it sublimates. Sublimation is the process of going directly from solid form into gas form. Dry ice by-passes the liquid form, hence the "dry" ice.

The first step in producing dry ice is to turn the carbon dioxide gas into a liquid. This is done by compressing the CO₂ and removing excess heat. Next, the pressure is reduced over the liquid carbon dioxide by sending it through a snow valve (expansion valve). As the liquid evaporates, it absorbs heat, causing some of the CO₂ to freeze into dry ice snowflakes. The dry ice snow is then exposed to compaction by a large press to form blocks. Dry ice is much heavier than traditional ice, weighing 1.7 times as much. CO₂ is a natural substance produced by the combustion of organic compounds and is exhaled by humans and other living beings.

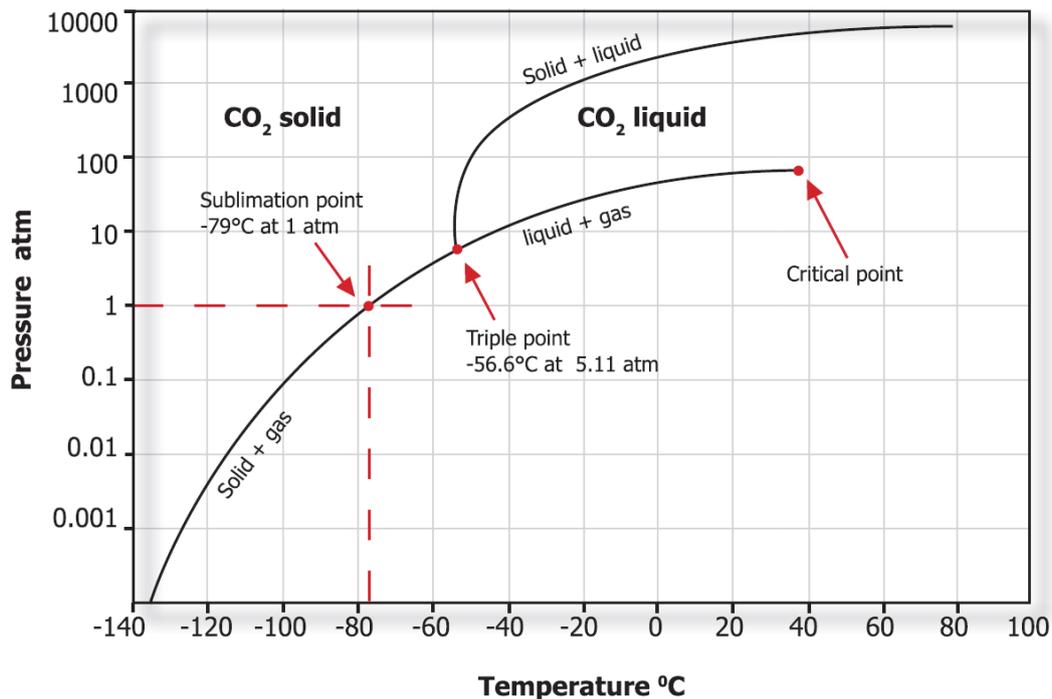

Pressure- Temperature phase diagram for CO₂

CO₂ is:

- :: Non-toxic
- :: Transparent
- :: Odourless gas under atmospheric pressure and temperature
- :: 1½ times heavier than air
- :: The atmosphere consists of 0.03% CO₂

CO₂ exists in three forms:

- :: Gas, e.g. used in the food industry
- :: Liquid, kept under pressure
- :: Solid, dry ice

SAFETY REGULATIONS

General Measures

The Cold Jet PR120H manual contains instructions on starting up, operating and servicing the machine. The operator must follow the instructions in the manual. Moreover it is important that the owner makes sure that the operator understands the contents of this manual and follows its guidelines and safety regulations.

Personnel Qualifications

Employees who are in charge of mounting, operation, service and maintenance must be adequately qualified to take care of such job functions.

If the employees do not possess sufficient knowledge, they must be instructed and trained properly. If necessary, this can be arranged in cooperation with the manufacturer of the machine.

The owner of the machine shall make sure that the operator, who is to work with the Cold Jet PR120H, fully understands the importance of studying the content of the manual and complying with the SAFETY REGULATIONS described on the following pages as well as those placed on the machine.

Contraindications

Cold Jet Machines are designed to operate for long periods of time. The machine is designed with an HMI that enables the operator to act upon errors that might occur during operation. The machine should only be operated with the doors closed. Entering the machine, for service purposes etc. should be done in a way that allows the Contained CO2 to reach a safe level and the temperature to fall for certain areas.

Machines with moving parts inside can cause injury, therefore they are designed with door switches that disable the machines from running when opened/activated.

Security and Risk

The Cold Jet PR120H is designed so as to comply with the EC Declaration of Conformity for Machinery. Therefore, using the machine does not pose a risk to the operator when the instructions in this manual are followed carefully.

It is important that the operator carefully follows the safety signs on the machine and the safety regulations described later in this manual and that the operator reads and understands the content of this manual before starting up the machine. Installation must be carried out according to the instruction "Unpacking and preparations before installation".

The machine may only be installed by authorized personnel, that is electricians with knowledge of the Council Directives BT 2014/35/EU and EMC 2014/30/EU (or similar directives in other parts of the world).

Safety Labels

The symbols used on the machine were developed by the International Organization for Standardization (ISO) and are defined below. These symbols may include yellow warnings triangles, blue mandatory action circles, or red prohibited action circles.




Danger of Suffocation

Dry ice pellets are CO₂ in solid form. At ordinary atmospheric pressure, CO₂ can only exist in this solid form at temperatures of -79°C (-110°F) or lower. Therefore, during dry ice production, the CO₂ will immediately be heated and thus transform from solid form into gas form.

Please note:

Since the specific gravity of CO₂ is higher than that of ordinary atmospheric air, the air with its contents of oxygen will be replaced by CO₂ if the dry ice production is taking place in small or insufficiently ventilated rooms.

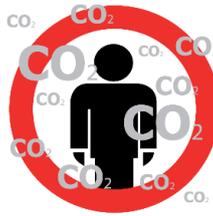

Therefore, please note the following:

1. Low CO₂ concentrations (3-5%) cause headaches and fast breathing.
2. CO₂ concentrations of (7-10%) cause headaches and nausea and may result in unconsciousness.
3. Higher CO₂ concentrations result in unconsciousness and at worst it may cause suffocation.

High CO₂ concentrations may result in unconsciousness due to displacement of oxygen. Therefore, always make sure to provide sufficient ventilation of the working area, and always avoid producing dry ice in small rooms.



Static Electricity

Dry ice can cause electrostatic discharges. However, the equipment bonded to ground to minimize electrostatic discharge, and the warning sign is only meant to instruct the operator to avoid placing the equipment in rooms containing explosive gasses.

Also, it is recommended to use a plastic shovel in the dry ice container.



Danger of Congelation

CO₂ in solid form has a temperature of -79°C /-110°F or lower at atmospheric pressure and can therefore cause serious congelation injuries.

IMPORTANT!

The dry ice is extremely cold; therefore, do not touch parts of the machine which are in direct contact with the dry ice without wearing appropriate protective clothing and gloves.



Pinch Point Hazard

If the plexiglass covers in front of the extruder plates are removed, the operator will be exposed to pinch point hazards.



Wear Protective Gloves

During work with the conveyor system, the operator must wear protective gloves in order to avoid contact with the dry ice or with parts of the machine which are in direct contact with the dry ice.



How to Lift / Transport

1. The PR120H is supplied with thread holes for lifting eyes. Always use lifting eyes to lift the PR120H.
2. Always lift the Pelletizer according to the lifting Instruction in this manual.
3. Lifting over persons and animals is prohibited.
4. Always use a forklift truck to transport the Pelletizer.
5. Pick up the Pelletizer from the side as shown in the drawings.
6. Transport the Pelletizer upright.
7. Make sure that the forks are sufficiently long to fully engage the Pelletizer.
8. Always check that the forks are adjusted to maximum width.

SAFETY OPERATION

Emergency Stop

All equipment is connected to the general emergency system for the Cold Jet PR120H.

When an emergency-stop device is activated, all components located in the emergency zone will be disconnected from their power source.

Machine Safety

There are machine safety measures in the following areas:

- Extruder unit
- Extruder plate changer

In these areas, protective covers are in place.

The covers are provided with locking screws to deter removal.

Required performance level PLr = c Implemented in category = Cat3.

There is a danger of congelation/frost bite by touching machine parts cooled down by dry ice.

To prevent congelation the entire machine enclosure is provided with locks that require special tools to open.

Liquid CO₂ Leakage

If liquid CO₂ is leaking from any point of the CO₂ pipe system, the CO₂ supply must be stopped immediately. Localize the leakage and repair.

Stop Production

1. The machine is stopped by pressing the "Start / Stop" button.

NOTE: This will activate the shutdown procedure.

2. The CO₂ valve on the machine inlet will automatically close. It is recommended to close the manual valve on the mounting kit before leaving the machine unused for a longer period of time.
3. Cut off the main electric supply.

NOTE:


Do not shut off the main switch on the cabinet inside the machine before the inlet CO₂ pressure is ZERO. The CO₂ pressure can be checked on the "Process values" page.

Daily checkup before start-up

1. Check the oil level in the sight glass.
2. Check the pipe system for leaks.
3. Check the operation time since service intervals.
4. Open the drain and drain all water from the frame, then guide any remaining towards the open

MACHINE STRUCTURE

PR120H

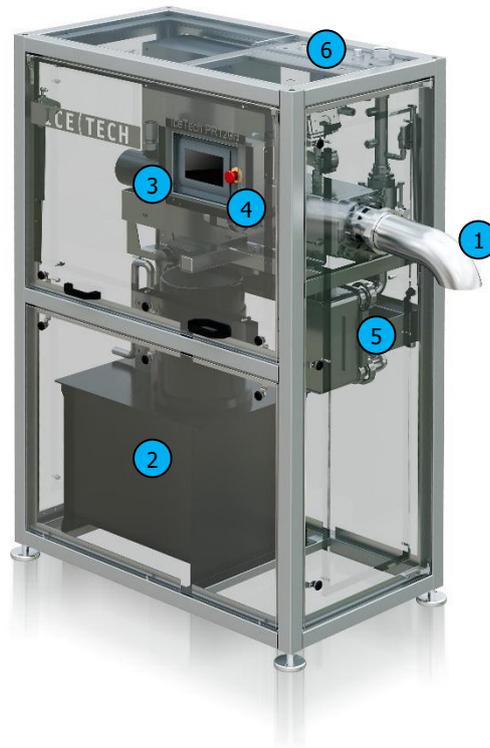

- 1 Pellets outlet sprout**
- 2 Hydraulic station**
- 3 Main hydraulic cylinder**
- 4 Touch panel**
- 5 Heat exchanger**
- 6 Connection to external supply**

MACHINE OPERATION START-UP

PR120H



- 1 Make sure that the CO₂, power supply and exhaust CO₂ pipe are connected. Open ball valves for liquid CO₂ supply and degassing.



- 2 Turn the MAIN SWITCH on.



- 3 To start up the Cold Jet PR120H, select the "Automatic mode" and press the "Start" button.

MACHINE CONTROLS

PR120H



1 Start up page

This page can be activated from any page by pressing the "Home button" in the lower right hand corner.



2 Start / Stop


By activating the "Start / Stop" button, the machine starts or stops when in group mode.



3 Mode select

By activating the "mode select" button, it is possible to choose between automatic mode and single mode.

The default selection is automatic mode, which must be selected for production. In single mode, the components can be operated individually.

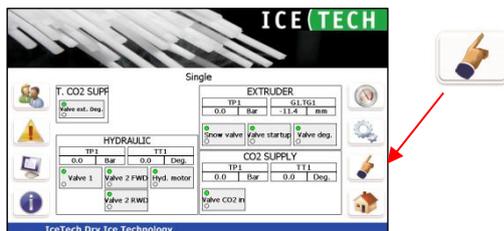

4 Single mode controls

By activating the "Single mode" button, the manual operation page will appear. On this page, it is possible to access the function in single mode, i.e. operating the components one by one.

This page should only be operated by well-trained staff and with reference to P&I diagram.

The components will be activated by pressing the buttons. When the component is activated and working properly, the button will turn green showing "Component OK".


Most components have real names like "purge valve" and moving the hydraulic cylinders can be done by starting the hydraulic motor and pressing the arrow buttons.

The hydraulic valves have numbers corresponding to the P&I diagram.



5 Set point

By pressing the "toothed wheel" button, the "Setpoint" (SV) page is activated. The "set point" section contains 3 pages display of set values for the current dry ice production. Fixed set points are password protected and have hardcoded limits to avoid unsafe production.

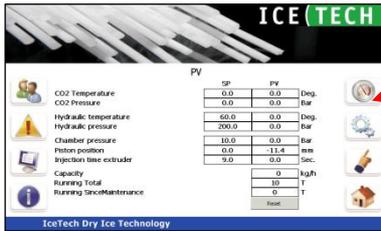

6 Process values

By pressing the "gauge" button, the "process values" page is activated. The page contains a 2-column display of real time process values (PV). The corresponding "Set Values" (SV) are displayed next to the PV for comparison. During production, the PV will vary inside the given SV window. The operating hours, time to service calculated capacity is also displayed on this page.



7 Alarm

The Alarm page displays alarms for PR120H. By pushing the "Alarm" button, the active alarms are shown on the screen. The alarm text will be written in red. Alarms must be reset before the production can continue.

To reset an alarm, press the reset button. If the error is corrected, the alarm text will be removed.



8 Password protection

Some functions are password protected, ie. setpoints. To change these values, the operator must login. By activating the "User" button, a login window and a keyboard appears on the screen. Select the user level and enter the corresponding password. Press OK to proceed and cancel to exit.



9 Shutdown before turning power off.

When machine have finished production and there is a need for shutting down machine and turn power off it is needed to follow this procedure.

Press mode select icon once and it changes into single mode.

In the bottom left on the screen there is now an active icon (exit door), press this icon once.

Now the HMI program will shut down and after this the Windows program will shut down. The screen will turn black with the text – It is now safe to turn off.

The power can now be turned off on the main switch on the electrical cabinet.

Note

In general, it is recommended leaving the machine with the main power on and avoiding turning the power off direct on the main power switch.

This is for protecting the PLC computer not wearing out, due to sudden power cut off.

REPAIR AND WARRANTY

Repair

The repair/replacement of the following parts can be made by the owner's qualified personnel:

- Oil, filter on the hydraulic system
- Filter for the liquid CO₂
- Degassing filter on the extruder
- Piston on the extruder

When making repairs/replacements, use only original Cold Jet spare parts.

MAINTENANCE

Inspections to be carried out every week: Hydraulic station:

Inspect for oil leakages, Check hoses, fittings, valves, and connections for leakages. Reseal if necessary. Check the oil level, in the sight glass on the hydraulic tank side. Refill if necessary.

Degassing system

Check the degassing system. Check the degassing for snow particles at the CO₂ outlet (can only be done when dry ice is being produced)

Snow particles at the CO₂ outlet indicate that the degassing filter is damaged. Replace the filter and gasket as described under in this manual.

Inspections to be carried out every 400 hours / 3 months: Liquid CO₂ filter:

Hydraulic station

Check the oil. Drain a small quantity of oil – 1 dl – from the hydraulic tank. Inspect the oil visually. If the oil is not clear, bright, and light yellow it must be changed. Get a particle analysis of the oil if in doubt about the contamination degree.

Cold Jet recommends that the owner has a spare parts package in stock, so repairs can be made quickly and with little loss of production time.

Terms of Warranty

In order to comply with the terms of the warranty, and for safety reasons, repairs other than those stated above require relevant tools and equipment and therefore must always be made either by a Cold Jet technician or by the owner's qualified personnel who has been trained by Cold Jet in the repair and maintenance of Cold Jet dry ice blasting and dry ice production machines and accessories. Beyond the necessary knowledge, the person concerned must have appropriate tools and equipment, as well as the auxiliary materials required, at his disposal.

The liability of the manufacturer under the terms of the CE endorsement as regards safety may become

invalid:

- If repairs are made using non-Cold Jet spare parts.
- If repairs are made by unqualified personnel.
- If repairs are unsatisfactory due to lack of relevant tools and equipment.

In such cases, the liability of the manufacturer will be solely confined to any manufacturing faults/errors made prior to the machine being delivered and before repairs/replacements have been made.

Cleaning the PR120H

The following steps are necessary when the PR120H needs to be cleaned.

- Disconnect the power.
- Protect all electronic equipment.

All surfaces can be cleaned with a degreaser and acid-free oil. If the bottom of the PR120H is full of water/oil there is a drain plug that can be found on the backside of the PR120H.

Always close the drain after use.

INSTRUCTION – UNPACKING AND PREPARATIONS BEFORE INSTALLATION

Your new pelletizer has been assembled as one unit. In order to avoid damages during transport, the pelletizer has been bolted onto the transport pallet.

Unpacking and Examination for Transport Damages

1. Examine the transport box for any damages occurred during transportation.
2. Remove the straps that secure the transport box to the pallet.
3. Remove the top and side plates from the transport box.
4. Remove the straps that secure the PR120H to the pallet.
5. Unbolt the 4 bolts that secure the PR120H to the pallet.
6. Examine the PR120H for external transport damages.
7. Open the cabinet door at the control panel and examine the PR120H for internal transport damages.

Requirements on the Environment Surrounding the PR120H

- o The PR120H must be sheltered from wind and weather.
- o The ambient temperature must be minimum +10°C (+50°F).

How to Lift / Transport the PR120H

Cold Jet PR120H: Drawing no. A1

- o The Cold Jet PR120H is supplied with thread holes for lifting eyes. Always use lifting eyes to lift the pelletizer.
- o Always lift the PR120H according to the lifting instruction in this manual.
- o Lifting over persons and animals is prohibited.
- o Always use a forklift truck to transport the PR120H.
- o Pick up the PR120H from the side as shown in the drawings.
- o Transport the PR120H upright.
- o Make sure that the forks are sufficiently long to fully engage the PR120H.
- o Always check that the forks are adjusted to maximum width.

PR120H:

Minimum load capacity of forklift truck: 1000 kg / 2205 lbs.

Minimum fork length: 0.8 m

Floor Characteristics and Minimum Clear Distances


Cold Jet PR120H: Drawing no. A2

- o The PR120H must be placed on a horizontal concrete floor with an adequate load-carrying capacity, free from crack formation and suitable for bolting the PR120H to it.
- o The minimum clear distances must be observed to provide sufficient space for opening the cabinet doors and servicing the PR120H.

Installation of the PR120H



The installation of the PR120H must be carried out by one of Cold Jet's service technician, or by a technician approved by Cold Jet.

DRAWING No. A1


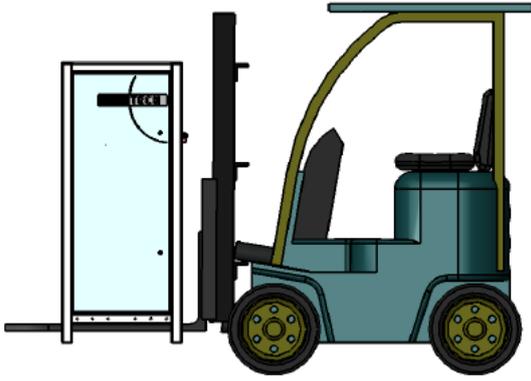


Correct Handling of Cold Jet PR120H




Minimum load capacity of forklift truck: 1000kg / 2205 lbs.
Minimum fork length: 0.8 m

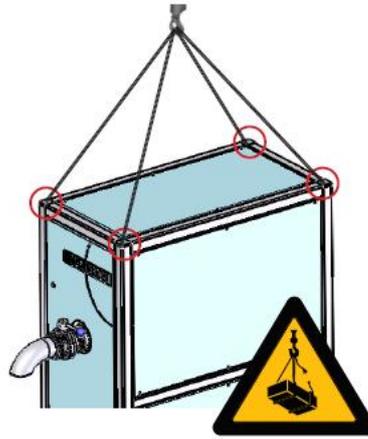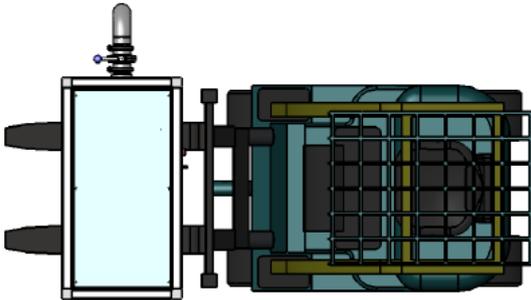

The PR120H is supplied with thread holes for lifting eyes. Always use lifting eyes to lift the PR120H.

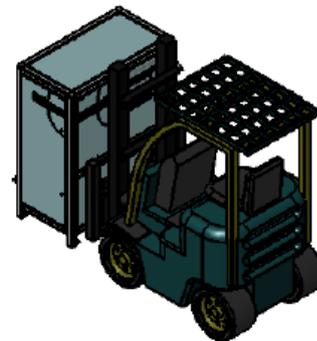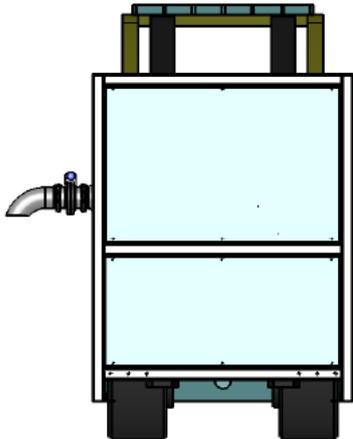

DRAWING No. A2

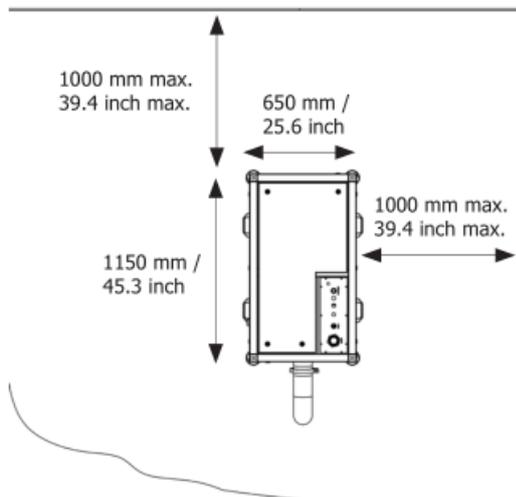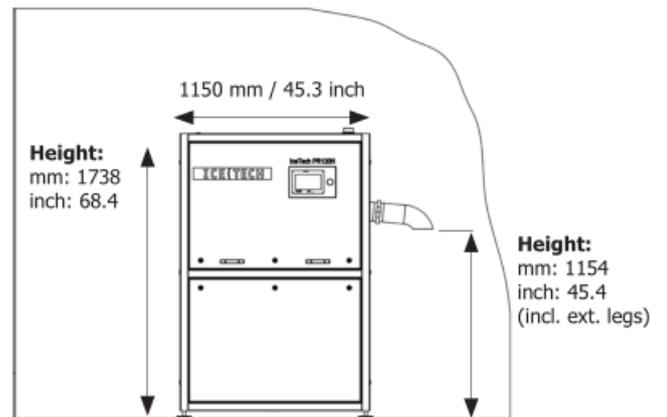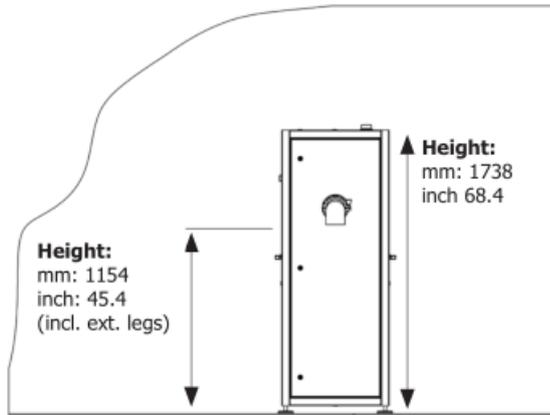

End of life for the PR120H

When the PR120H is at the end of its life, the following steps are required.

- Disconnect the power
- Disconnect the CO² IN
- Drain the PR120H oil

For handing of the PR120H read section **instruction – unpacking and preparations before installation.**

The materials and oil must be disposed of according to the jurisdictional rules and regulations for proper disposal.

CONTACT INFORMATION

Find the customer support and technical services contact information for your region in the table below.

USA – Cold jet (World Headquarters) 6283 Tri Ridge Blvd Loveland, Ohio 45140, USA Phone (US): +1-866-874-9876 Phone (After hours): +1(513)440-3619 Email: service@coldjet.com	Canada - Cold jet Canada 1727 Industrial Road, Unit 1 Cambridge, Ontario N3H 5G7 Phone: +1-800-337-9423 Phone (After hours): +1(513)440-3619 Email: service@coldjet.com
Latin America, Cold Jet Latinoamérica Calle Sinaloa, 901-3. Colonia: Nuevo Repueblo Monterrey, NL, Mexico CP: 64700 Phone: +52 (81) 1097-0445 Phone (After hours): +1(513)440-3619 Email: soporte@coldjet.com	Belgium – Cold jet bvba (European Headquarters) Zona 1 Researchpark 330 B-1731 Zellik Phone: +32 (0) 13 53 95 47 Phone (After hours): +1(513)440-3619 Email: service.eu@coldjet.com
Denmark - Cold Jet ApS Industrivej 68 6740 Bramming Phone: +45 76 56 15 00 Phone (After hours): +1(513)440-3619 Email: service.eu@coldjet.com	Germany – Cold jet GmbH Obere Industrie Strasse 1 54595 Weinsheim Phone: +49 (0) 6551 9606-0 Phone (After hours): +1(513)440-3619 Email: service.eu@coldjet.com
Poland – Cold Jet Sp. Z o.o. ul. Łukowska 12, Oborniki, Poland, 64-600 Phone: +48 798 33 88 00 Phone (After hours): +1(513)440-3619 Email: service.eu@coldjet.com	Spain – Cold jet Madrid C/ Oporto, Portal, 3 Pol.Ind. Europolis 28232 Las Rozas de Madrid, Madrid, Spain Phone: +34 91 426 79 63 Phone (After hours): +1(513)440-3619 Email: service.eu@coldjet.com
China Room 111, Building 1, Jindu Road No. 1199, Minhang District, Shanghai, 201108, China Phone: +86 21 5296 7161 Phone (After hours): +1(513)440-3619 Email: service.cn@coldjet.com	Japan/APAC 1-20-4 Ishiwara, Sumida Tokyo 130-0011 Phone: +81 3 6869 2665 Phone (After hours): +1(513)440-3619 Email: service.apac@coldjet.com
